


Typical left hand circuit pattern example

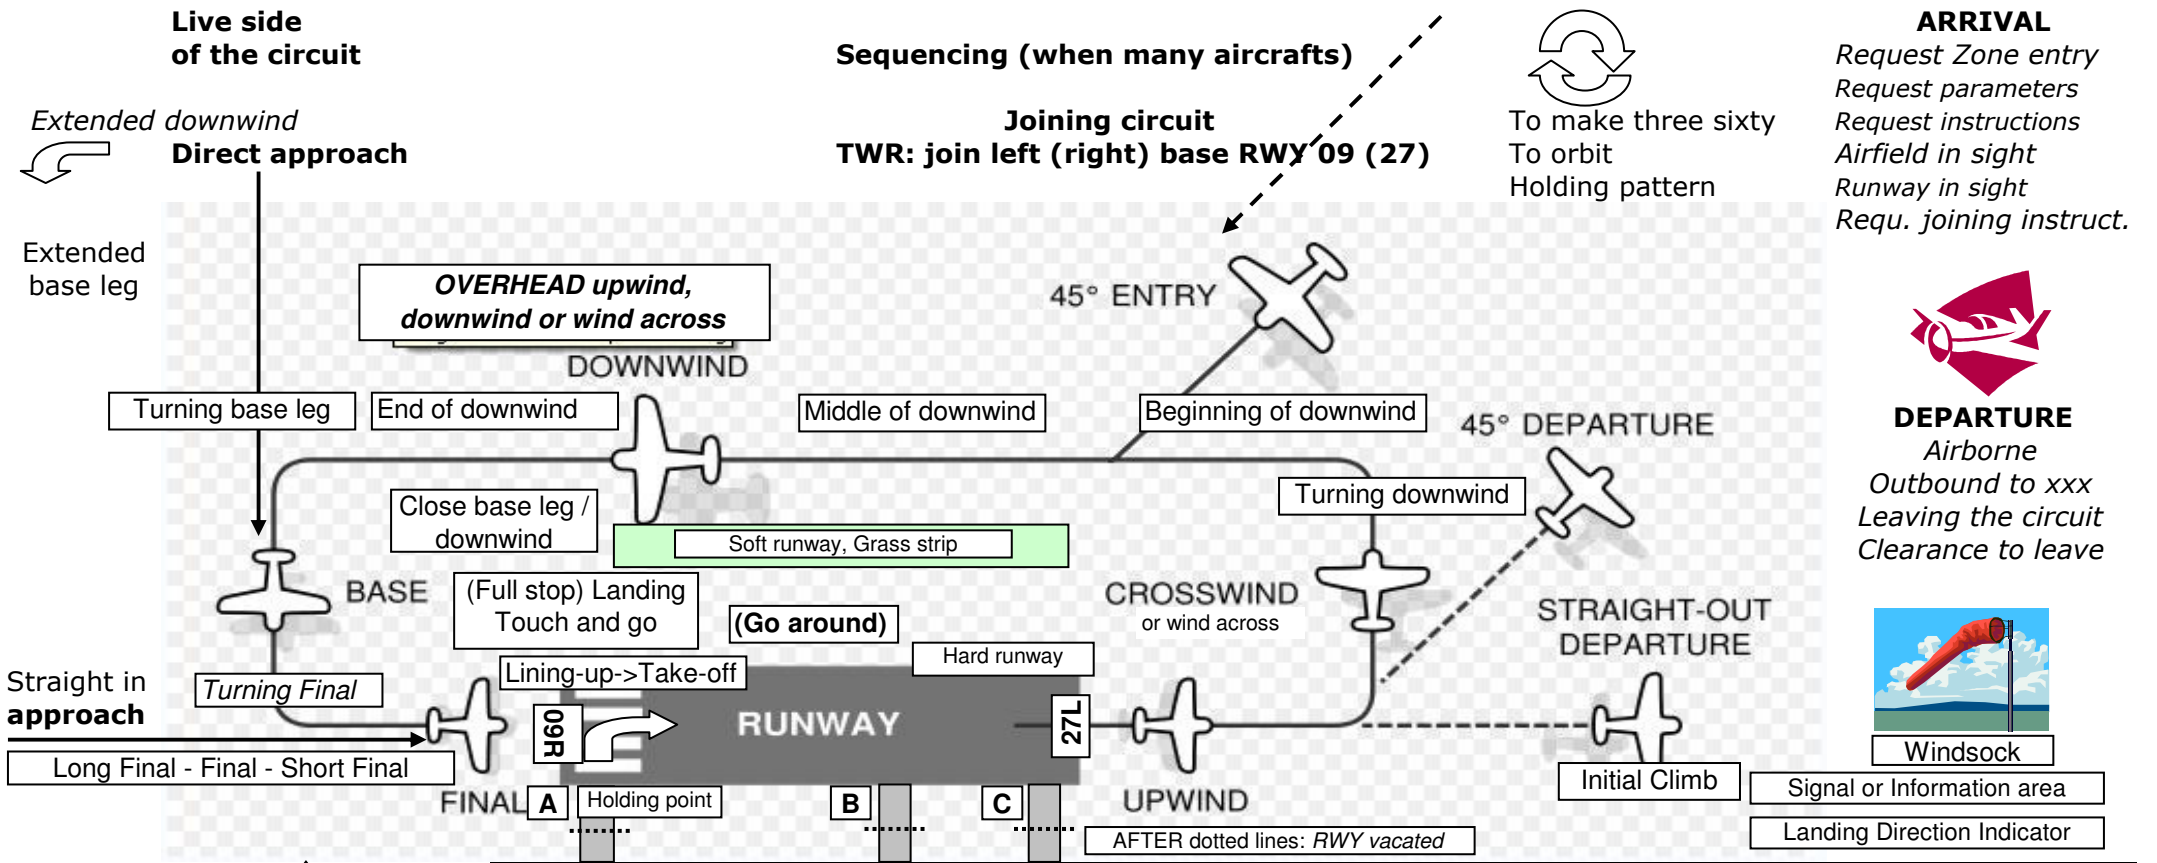

ARRIVAL
 Request Zone entry
 Request parameters
 Request instructions
 Airfield in sight
 Runway in sight
 Requ. joining instruct.

DEPARTURE
 Airborne
 Outbound to xxx
 Leaving the circuit
 Clearance to leave









Windsock

Signal or Information area

Landing Direction Indicator

Right hand circuit

REMEMBER:
 You **REQUEST** and then
 You are **CLEARED** (if accepted!)

Threshold To maintain position			Taxiway		
To hold short of... Rolling take-off To backtrack U-Turn, One eighty To expedite taxiing holding bay ramp			Marshaller 		
shuttle (for passengers) follow-me car Ground handling 			Apron (grass, hard)  Clearance to start-up Request parameters Clearance to taxi		Fire station 
			STANDS		Refuelling station  Bowser, refueller FBO (1)
			B1		A1
			B2		A2
Control office ©			Control tower	Terminal	
Forecast / Met office			Customs		Shops
			B4	B3	A4 

(1) Fixed Base Operator